



Your Style...Your Life

HSV 330

COMBI REFRIGERATOR - FREEZER

Dear Customer,

Thank you for that you have chosen our product. We hope that it will meet your requirements.

Carefully follow the recommendations laid out in this manual and your appliance will work efficiently.

Do not hesitate to contact us in case of necessity. We always will be close to you in order to assist you in need and give you useful information for all products under Eurolux brand.

PART 1 : BEFORE USING THE APPLIANCE

- Special Instructions
- Recommendations
- Installation and Switching On the Appliance
- Before Switching On

PART 2 : THE VARIOUS FUNCTIONS AND POSSIBILITIES

- Thermostat Setting
- Display Panel

PART 3 : ARRANGING FOOD IN THE APPLIANCE

- Refrigerator Compartment
- Freezer Compartment

PART 4 : CLEANING AND MAINTENANCE

- Defrosting
- Replacing the Light Bulb

PART 5 : TRANSPORTATION AND CHANGING OF INSTALLATION POSITION

- Changing of Door Opening Direction
- Transportation and Changing of Installation Position

PART 6 : BEFORE CALLING YOUR AFTER SALES SERVICE

PART 7 : THE PARTS OF THE APLIANCE AND THE COMPARTMENTS

Safety Instructions

 
- If the model contains R600a-see name plate inside refrigerator (the coolant isobutane), natural gas that, is very environmentally friendly but also combustible. When transporting and installing the unit care must be taken to ensure that none of the refrigeration circuit components become damaged. In the event of damage avoid naked flames or ignition sources and ventilate the room in which the unit is placed for a few minutes.
- **Warning:** Keep ventilation openings in appliance enclosure or in structure for building in, clear of obstruction.
- Do not use mechanical devices or other artificial means to accelerate the defrosting process.
- Do not use electrical appliances in the refrigerator or freezer compartment of the appliance.
- If this appliance is to replace an old refrigerator with a lock; break or remove the lock as a safety measure before storing it, to protect children while playing might lock themselves inside.
- Old refrigerators and freezers contain insulation gases and refrigerant, which must be disposed of properly. Entrust the disposal of a scrap unit categorically to competence of your local waste disposal service and contact your local authority or your dealer if you have any questions. Please ensure that the pipe of work of your refrigerating unit does not get damaged prior to being picked-up by the relevant waste disposal service.

IMPORTANT NOTE:

- Please read this booklet before installing and switching on this appliance. The manufacturer assumes no responsibility for incorrect installation and usage as described in this booklet.



Recommendations

- Do not use adapters or shunts which could cause overheating or burning.
- Do not plug old, warped power supply cables.
- Do not twist and bend the cables.
- Do not allow children to play with the appliance. Children must NEVER sit on drawers/shelves or hang from the door.
- Do not use sharp metal objects for removing ice on the freezer compartment; they could puncture the refrigerator circuit and cause unrepairable damage to the unit. Use the plastic scraper provided.
- Do not plug the power supply with wet hands.
- Do not place containers (glass bottles or tin containers) of liquids into the freezer especially gassy liquids as they could cause the container to burst during freezing.
- Bottles that contain a high percentage of alcohol must be sealed well and placed vertically in the refrigerator.
- Do not touch the cooling surfaces, especially with wet hands as you could be burnt or hurt.
- Do not eat ice, which have just been removed from the freezer.
- If the supply cord is damaged it must be replaced by the manufacturer or service agent or appointed qualified person

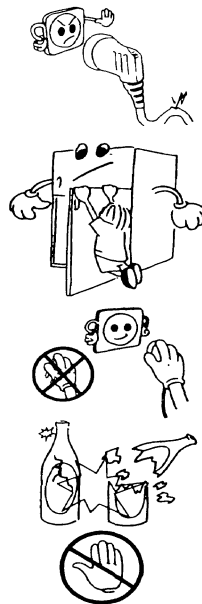


Installation and Switching On The Appliance

  - This appliance is connecting to 220-240V or 200-230V and 50 Hz. Please check nameneplate of appliance and be sure voltage range suitable to your mains voltage.
- You can offer help from the service to install and switching on the appliance.
- Before making the connection to the power supply,ensure that the voltage on the name plate corresponds to the voltage of electrical system in your home.
- Insert the plug into a socket with an efficient ground connection. If the socket has no ground contact or the plug does not match, we suggest you to call an authorised electrician for assistance.
- The plug should be accessible after the appliance is positioned.
- **Manufacturer is not responsible for failure to complete the ground connection as described in this booklet.**
- Do not place the appliance in direct sunlight.
- Do not use in open air and shall not be exposed to the rain.
- Place the refrigerator far from heat sources and in a well-ventilated position. The refrigerator should be at least 50 cm from radiators, gas or coal stoves and 5 cm far from electrical stoves.
- Keep the top free for at least 15 cm.
- Fit the plastic wall spacers to the condenser at the back of the refrigerator in order to prevent leaning to the wall for good performance.
- Do not place heavy and lots of things on the appliance.
- If the appliance is installed next to another refrigerator or freezer, observe a minimum distance of 2 cm to prevent condensation.
- The appliance must be stand firmly and level on the floor Use the two front levelling-feet to compensate for an even floor.
- The outside of the appliance and the accessories inside should be cleaned with a solution of water and liquid soap; the inside of the appliance with sodium bicarbonate dissolved in lukewarm water. After drying replace all the accessories.

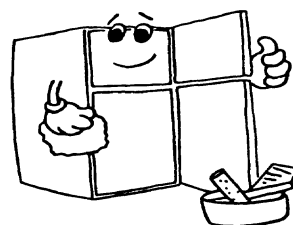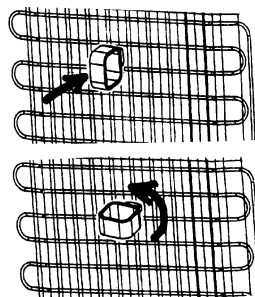

Before Switching On

 
- Wait after 3 hours before plugging the appliance in to the main power to ensure proper performance.
- There can be an odour when you first switch on the appliance. It will disappear after the appliance starts to cool.

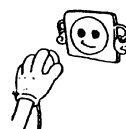

PART 2. THE VARIOUS FUNCTION AND POSSIBILITIES

Thermostat Setting

 FREEZER & REFRIGERATOR THERMOSTAT

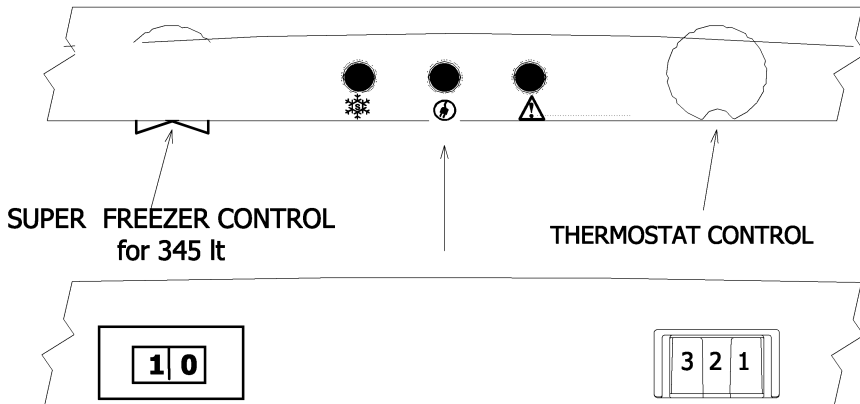

Freezer thermostat automatically regulates the inside temperature of the compartments. By rotating the knob from position 1 to 5, colder temperatures can be obtained.

Freezer & Refrigerator Thermostat Setting;

1 – 2 : For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.

3 – 4 : For long-term storage of food in the freezer compartment, you can set knob medium position.

5 : For freezing the fresh food. The appliance will work longer. So after you get the cold condition you must position to previous position.

SUPER FREEZE SWITCH

O : OFF Position.

 
1 : ON Position. For freezing the fresh food or when the RED lamp is light. The appliance will work longer. So after you get the cold condition (or the Red lamp is off) you must position to previous position.

Please not that: for energy saving do not switch on "1" position for along time.

• **Note that;** the ambient temperature, temperature of the freshly stored food and how often the door is opened, affects the temperature in the freezer compartment. If required, change the temperature setting.

DISPLAY PANEL

UK

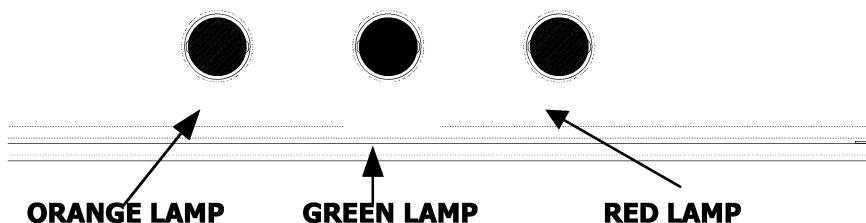

ORANGE LAMP: When the "Super Switch" operation is on (Super Switch is on-1 position), the orange lamp will turn on.

GREEN LAMP: When the appliance is connected to the power supply, the green lamp on the display panel will turn on automatically.

RED LAMP: When the freezer compartment is not cold enough, the red lamp will turn on. Set the super switch "1" position until the red lamp is off. After you get the cold condition you must position to "0" position.

 
Turning On The Appliance

Once the appliance has been connected to the power supply make sure that the GREEN lamp is on. Then turn the thermostat dial to position "5" (max position) and switch the super switch ON until the RED lamp is off (Note that; for best internal temperature the indicator in the thermostat should be positioned between 2 and 4.)

- **When you first switch on the appliance, for starting a suitable cooling, the appliance should work with in 24 hours continuously until it cools down to sufficient temperature.**
- **In this time do not open the door so often and place a lot of food inside the appliance.**
- **If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting or re-plugged the unit in order not to damage the compressor.**

Ice tray ;


- Fill the ice tray with water and place in freezer compartment.
- After the water completely turned into ice, you can twist the tray as shown below to get the ice cube.

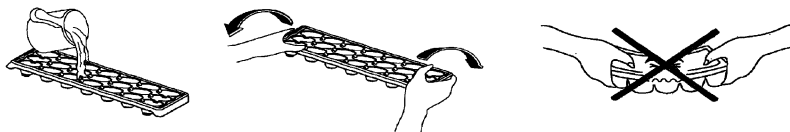

Bottle holder ; (*)

- In order to prevent the bottles to slip or fall over you can use the bottle holder. You can also prevent making noise that will be done when you open or close the door.

 ()ONLY IN SOME MODELS*

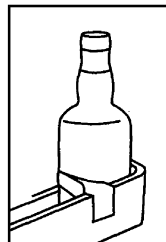


Refrigerator Compartment

- To reduce humidity and consequent increase of frost never place liquids in unsealed containers in the refrigerator. Frost tends to concentrate in the coldest parts of the evaporator and in time will require more frequent defrosting.
- Never place warm food in the refrigerator. Warm food should be allowed to cool at room temperature and should be arranged to ensure adequate air circulation in the refrigerator compartment.
- Nothing should touch to refrigerator back wall as it will cause frost and the packages can stick here. Do not open the refrigerator door too frequently.
- Arrange the meat and cleaned fish (wrapped in packages or sheets of plastic) which you will use in 1-2 days.
- You can put the fruits and vegetables into crisper without packing.

Freezer Compartment


- The use of freezer is, storing of deep-frozen or frozen food for long periods of time and making ice cubes.
- Do not put fresh and warm food to the freezer door shelves to be frozen. Only use for storage of frozen food.
- Do not put fresh and warm food with frozen food side by side as it can thaw the frozen food.
- While freezing fresh food (i.e. meat, fish and mincemeat) divide them in parts you will use in one time.
- **For storing the frozen food;** the instructions shown on frozen food packages should always be followed carefully and if no information is provided food should not be stored for more than 3 months from the purchased date.
- **When buying frozen food** ensure that these have been frozen at suitable temperatures and that the packing is intact.
- Frozen food should be transported in appropriate containers to maintain the quality of the food and should be returned to the freezing surfaces of the unit in the shortest possible time.
- If a package of frozen food shows the sign of humidity and abnormal swelling it is probable that it has been previously stored at an unsuitable temperature and that the contents have deteriorated.
- **The storage life of frozen food** depends on the room temperature, thermostat setting, how often the door is opened, the type of food and the length of time required to transport the product from the shop to your home. Always follow the instructions printed on the package and never exceed the maximum storage life indicated.
- Use the fast freezing shelf to freeze home cooking (and the food which is wanted to freeze) more quickly because of the freezing room's greater freezing power. Fast freezing shelves are the middle drawers of the freezer compartment (see in page 1)

 - **Disconnect unit from the power supply before cleaning.**




- Do not clean the appliance by pouring water.

 - The refrigerator and freezer compartment should be cleaned periodically using a solution of bicarbonate of soda and lukewarm water

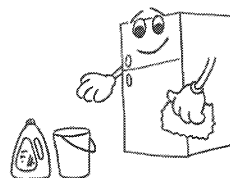

- Clean the accessories separately with soap and water. Do not clean them in the washing machine.

 - Do not use abrasive products, detergents or soaps. After washing, rinse with clean water and dry carefully. When the cleaning operations have been completed reconnect the plug of the unit with dry hands.


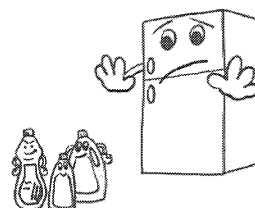


- You should clean the condenser (back of the appliance) with broom ones a year in order to provide energy saving and increase the productivity.

THE POWER SUPPLY MUST BE DISCONNECTED.

Defrosting refrigerator compartment

  - Defrosting occurs fully automatically in refrigerator compartment during operation; the defrosted water collected by the evaporating tray and evaporates automatically.
- The evaporating tray and water drain hole (back of the refrigerator crisper shelf) should be cleaned periodically to prevent the water from collecting on the bottom of the refrigerator instead of flowing out.

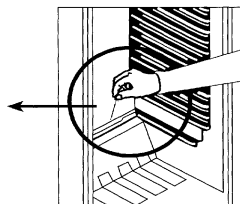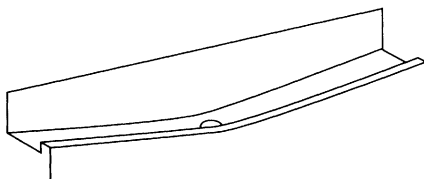

Defrosting Freezer compartment

- The frost, which covers the shelves of the freezer compartment, should be removed periodically.
- **Do not use sharp metal objects for this operation.** They could puncture the refrigerator circuit and cause irreparable damage to the unit. Use the plastic scraper provided.
- When there is more than 5 mm of frost on the shelves, defrosting must be done.
- Before defrosting operation, place the frozen food in a cool place after wrapping them in sheets of newspaper in order to obtain its temperature steady for long time.
- This appliance is provided with a special drain system.

1-Pull out the bottom drawer of the freezer compartment and open the **water drain cover (A)** which is at the back of the drawer (figure-1).

2- Pull out the **drain plug (B)** placed under the freezer compartment (figure-2).

3- Place the **water drain cover (A)** beneath the **drain plug (B)** .(figure-3)

4- Take out the water collected in the drawer.

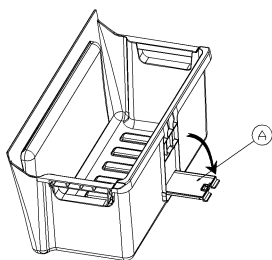 


FIGURE -1-

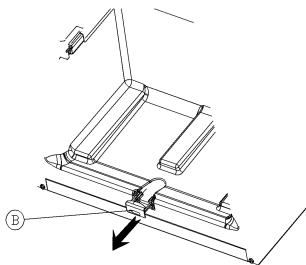 


FIGURE -2-


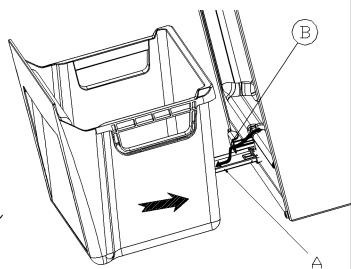 


FIGURE -3-

- To accelerate the defrosting process place one or more basins of warm water in the freezer compartment.
- Dry the inside of the compartment with a sponge or a clean cloth.
- Once the unit has been defrosted, place the food into freezer and remember to consume them in a short period of time.

 Replacing the Refrigerator Light Bulb

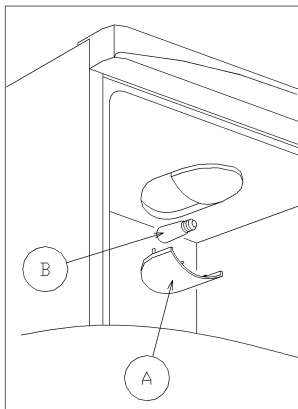

1. Unplug the unit from the power supply,
2. Remove the refrigerator light cover (A) by pressing the hooks placed both sides of the cover.
3. Change the present light bulb (B) with a new one (not more than 15 W).
4. Place the light cover in its place and plug the unit.


PART 5. TRANSPORTATION AND CHANGING OF INSTALLATION POSITION

Changing of Door Opening Direction

In case you need to change door-opening direction, please consult the domestic after sales service.

Transportation and Changing of Installation Position

 - The original packages and foamed polystyrene (PS) can be concealed if required.
- In transportation the appliance should be tied with a wide stripe or a strong rope. The rules written on the corrugated box must be applied while transporting.
- Before transporting or changing old installation position, all the moving objects (i.e. shelves, crisper...) should be taken out or fixed with bands in order to prevent the shake.

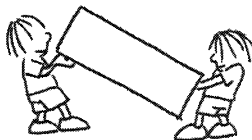

PART 6. BEFORE CALLING YOUR AFTER SALES SERVICE

If your refrigerator is not working properly, it may be a minor problem, therefore check the following, before calling an electrician to save time and money.

What to do if your appliance does not operate;

Check that;

- There is no power, (Green lamp is off)
- The general switch in your home is disconnected ,
- The thermostat setting is on« 0 »position ,
- The socket is not sufficient. To check this, plug in another appliance that you know which is working into the same socket.

What to do if your appliance performs poorly;(Red lamp is on)

Check that;

- You have overloaded the appliance ,
- The thermostat setting is "1" position (if so set the thermostat dial suitable value)
- The doors are closed perfectly ,
- There is no dust on the condenser ,
- There is enough place at the rear and side walls.

If there is noise;

The cooling gas which circulates in the refrigerator circuit may make a slight noise (bubbling sound) even when the compressor is not running. Do not worry this is quite normal. If these sounds are different check that;

- The appliance is well levelled
- Nothing is touching the rear.
- The stuffs on the appliance are vibrating.

If there is water in the lower part of the refrigerator,

Check that;

- The drain hole for defrost water is not clogged(Use defrost drain plug to clean the drain hole)

Recommendations

- **If the appliance is not used for long time** (for example during the summer holidays) unplug and clean the appliance and leave the door open to prevent the formation of mildew and smell.
- To stop the appliance completely, unplug from main socket (for cleaning and when the doors are left open)


PART 7. THE PARTS OF THE APPLIANCE AND THE COMPARTMENTS

- | | |
|---------------------------------------|--|
| 1) DISPLAY PANEL | 13) AROMA BOX(*) |
| 2) THERMOSTAT DIAL | 14) BOTTOM SHELF |
| 3) REFRIGERATOR SHELF | 15) BOTTLE HOLDER (*) |
| 4) REFRIGERATOR LAMP&COVER | 16) ICE TRAY |
| 5) LAMP SWITCH | 17) ICE TRAY COMPARTMENT SHELF |
| 6) MEAT TRAY (*) | 18) FREEZER ROOM COVER |
| 7) CRISPER SHELF | 19) FREEZER COMP. DRAWER |
| 8) CRISPER | 20) FREEZER COMP. BOTTOM DRAWER |
| 9) TOP SHELF | 21) LEVELLING FOOT |
| 10) TOP SHELF COVER(**) | 22) KICK PLATE (*) |
| 11) EGG SHELF | 23) WATER DRAIN PLUG |
| 12) EGG HOLDER | |

(*) OPTIONAL / ONLY IN 345 LT.

() ONLY IN 265 LT.**



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

