

Switching on the machine



1 Press the Power On/Off key.

2 Select the program suiting your dishes via the Program Selection button.

3 If you prefer or wish to prefer, you can choose additional function

Machine is energized when the On/Off button is pressed, two dashes appear in the program display and the end of program indicator turns on.

When you select a program with the program selection button, the program you select (P1, P2, etc) appears on the program display and the end of program indicator turns off.

Close door. The program starts automatically.

Note: If you decide not to start to machine after selecting the program, just press the on/off button. Your machine will become ready for the new program selection when you press on/off button again. You can select the new program by pressing the program selection button.

Program follow-up



Do not open the door before the program ends.

End of program indicator on the control panel turns on when the selected washing program is completed. Your machine also gives a buzzer sound for "5 times" when the program is completed.

Changing a programme

If you would like to change programs while a washing program is continuing.



Open the door and select a new program by pressing the program selection button.

 
After closing the door, the new program started will resume the course of the old program.

Note: When the door of the machine is opened in order to stop the washing program before it is completed first open the door slightly in order to avoid water spillage.

Changing a programme with resetting

If you would like to cancel a program while a washing program is resumed

Open the door of your machine. The last selected program will appear on the screen.



Keep the program selection button pressed for 3 seconds. End of program indicator flashes and "1" is indicated on the program display.

Discharge process starts after closing the door of the machine. The machine discharges the water in it for about 30 seconds. When the program is cancelled, your machine gives a buzzer sound for "5 times" and the "end of program indicator" turns on.

Note: When the door of the machine is opened in order to stop the washing program before it is completed first open the door slightly in order to avoid water spillage.

Switching the machine off

When end of program indicator turns on, switch your machine off by using the Power On/Off button.

Pull the plug out of the outlet. Turn of the water tap.



Note: After the buzzer sound which indicates the end of the program when the washing program comes to an end (end indicator light is on), you can leave the door of your machine closed in order to hasten the drying.

Note: If the machine door opens during washing or the power is cut off, the machine will go on to the program in case the door is shut or the power is back.