

**USE AND MAINTENANCE  
INSTRUCTIONS FOR BUILT-IN OVENS**

**MANUEL D'UTILISATION ET D'ENTRETIEN  
POUR FOURS ENCASTRABLES**

**GEBRAUCHS- UND WARTUNGSANLEITUNG  
FÜR EINBAUBACKÖFEN**

**INSTRUCCIONES DE USO Y MANTENIMIENTO  
PARA HORNOS EMPOTRADOS**

**ISTRUZIONI D'USO E MANUTENZIONE  
PER FORNI AD INCASSO**





<b>EN</b>	The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.
<b>DE</b>	Dieses Produkt darf am Ende seiner Lebensdauer nicht über den normalen Haushaltsabfall entsorgt werden, sondern muss an einem Sammelpunkt für das Recycling von elektrischen und elektronischen Geräten abgegeben werden. Das Symbol auf dem Produkt, der Gebrauchsanleitung oder der Verpackung weist darauf hin. Die Werkstoffe sind gemäß ihrer Kennzeichnung wiederverwertbar. Mit der Wiederverwendung, der stofflichen Verwertung oder anderen Formen der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt. Bitte erfragen Sie bei der Gemeindeverwaltung die zuständige Entsorgungsstelle.
<b>IT</b>	Il simbolo sul prodotto o sulla confezione indica che il prodotto non deve essere considerato come un normale rifiuto domestico, ma deve essere portato nel punto di raccolta appropriato per il riciclaggio di apparecchiature elettriche ed elettroniche. Provvedendo a smaltire questo prodotto in modo appropriato, si contribuisce a evitare potenziali conseguenze negative per l'ambiente e per la salute, che potrebbero derivare da uno smaltimento inadeguato del prodotto. Per informazioni più dettagliate sul riciclaggio di questo prodotto, contattare l'ufficio comunale, il servizio locale di smaltimento rifiuti o il negozio in cui è stato acquistato il prodotto.
<b>FR</b>	Ce symbole figure sur le produit ou sur son emballage en application de la directive européenne 2002/96/CE sur les Déchets d'Équipement Électrique et Électronique (DEEE). Cette directive sert de règlement cadre à la reprise, au recyclage et à la valorisation des appareils usagés dans toute l'Europe. Ce produit doit donc faire l'objet d'une collecte sélective. Lorsque vous ne l'utiliserez plus, remettez-le à un service de ramassage spécialisé ou à une déchèterie qui traite les DEEE ; vous contribuerez ainsi à éviter des conséquences néfastes pour la santé et l'environnement. Pour tout renseignement sur la mise au rebut et le recyclage de ce produit, veuillez contacter la mairie ou le service de la propreté de votre commune, ou encore le magasin dans lequel vous l'avez acheté.
<b>ES</b>	Este aparato lleva el marcado CE en conformidad con la Directiva 2002/96/EC del Parlamento Europeo y del Consejo sobre residuos de aparatos eléctricos y electrónicos (RAEE). La correcta eliminación de este producto evita consecuencias negativas para el medioambiente y la salud. El símbolo en el producto o en los documentos que se incluyen con el producto, indica que no se puede tratar como residuo doméstico. Es necesario entregarlo en un punto de recogida para reciclar aparatos eléctricos y electrónicos. Deséchelo con arreglo a las normas medioambientales para eliminación de residuos. Para obtener información más detallada sobre el tratamiento, recuperación y reciclaje de este producto, póngase en contacto con el ayuntamiento, con el servicio de eliminación de residuos urbanos o la tienda donde adquirió el producto.
<b>PT</b>	O símbolo no produto ou na embalagem indica que este produto não pode ser tratado como lixo doméstico. Em vez disso, deve ser entregue ao centro de recolha selectiva para a reciclagem de equipamento eléctrico e electrónico. Ao garantir uma eliminação adequada deste produto, irá ajudar a evitar eventuais consequências negativas para o meio ambiente e para a saúde pública, que, de outra forma, poderiam ser provocadas por um tratamento incorrecto do produto. Para obter informações mais pormenorizadas sobre a reciclagem deste produto, contacte os serviços municipalizados locais, o centro de recolha selectiva da sua área de residência ou o estabelecimento onde adquiriu o produto.
<b>NL</b>	Het symbool op het product of op de verpakking wijst erop dat dit product niet als huishoudafval mag worden behandeld. Het moet echter naar een plaats worden gebracht waar elektrische en elektronische apparatuur wordt gerecyield. Als u ervoor zorgt dat dit product op de correcte manier wordt verwijderd, voorkomt u mogelijk voor mens en milieu negatieve gevolgen die zich zouden kunnen voordoen in geval van verkeerde afvalbehandeling. Voor meer details in verband met het recyclen van dit product, neemt u het best contact op met de gemeentelijke instanties, het bedrijf of de dienst belast met de verwijdering van huishoudafval of de winkel waar u het product hebt gekocht.
<b>RO</b>	Simbolul de pe produs sau de pe ambalaj indica faptul ca produsul nu trebuie aruncat impreuna cu gunoii menajeri. Trebuie predat la punctul de colectare corespunzator pentru reciclarea echipamentelor electrice si electronice. Asigurandu-va ca ati eliminat in mod corect produsul, ajutati la evitarea potentialelor consecinte negative pentru mediul inconjurator si pentru sanatatea persoanelor, consecinte care ar putea deriva din aruncarea necorespunzatoare a acestui produs. Pentru mai multe informatii detaliate despre reciclarea acestui produs, va rugam sa contactati biroul local, serviciul pentru eliminarea deseurilor sau magazinul de la care l-ati achizitionat.
<b>SLO</b>	Simbol na izdelku ali njegovi embalaži označuje, da z izdelkom ni dovoljeno ravnati kot z običajnimi gospodinjstskimi odpadki. Izdelek odpeljite na ustrezno zbirno mesto za predelavo elektricne in elektronske opreme. S pravičnim načinom odstranjevanja izdelka boste pomagali preprečiti morebitne negativne posledice in vplive na okolje in zdravje ljudi, ki bi se lahko pojavile v primeru nepravilnega odstranjevanja izdelka. Za podrobnejše informacije o odstranjevanju in predelavi izdelka se obrnite na pristojen mestni organ za odstranjevanje odpadkov, komunalno službo ali na trgovino, v kateri ste izdelek kupili.
<b>PL</b>	Symbol na produkcie lub na opakowaniu oznacza, ze tego produktu nie wolno traktowac tak, jak innych odpadkow domowych. Nalezyc oddac go do dlasciowego punktu skupu surowcow wtornych zajmujacego sie zlomowanym sprzetem elektrycznym i elektronicznym. Wlasciwa uytulacja i zlomowanie pomaga w eliminacji niekorzystnego wplywu zlomowanych produktow na srodowisko naturalne oraz zdrowie. Aby uzyzkaac szczegolowe dane dotyczace mozliwosci recyklingu niniejszego urzadzenia, nalezyc skontaktowac sie z lokalnym urzadem miasta, sluzbami oczyszczania miasta lub sklepem, w ktorym produkt zostal zakupiony.
<b>SK</b>	Symbol na výrobku alebo na jeho obale znamená, že s výrobkom sa nesmie zaobchádzať ako s domovým odpadom. Namiesto toho ho treba odovzdať v zbernom stredisku na recykláciu elektrických alebo elektronickej zariadení. Zabezpečte, že tento výrobok bude zlikvidovaný správnym postupom, aby ste predišli negatívnym vplyvom na životné prostredie a ľudské zdravie, čo by bolo spôsobené nesprávnym postupom pri jeho likvidácii. Podrobnejšie informácie o recyklácii tohto výrobku získate, ak zavoláte miestny úrad vo Vašom bydlisku, zberné suroviny alebo obchod, v ktorom ste výrobok kúpili.
<b>CZ</b>	Symbol na výrobku nebo jeho balení udává, že tento výrobek nepatří do domácího odpadu. Je nutné odvézt ho do sberného místa pro recyklaci elektrického a elektronického zařízení. Zajištěním správné likvidace tohoto výrobku pomůžete zabránit negativním důsledkům pro životní prostředí a lidské zdraví, které by jinak byly způsobeny nevhodnou likvidací tohoto výrobku. Podrobnější informace o recyklaci tohoto výrobku zjistíte u příslušného místního úřadu, služby pro likvidaci domovního odpadu nebo v obchode, kde jste výrobek zakoupili.
<b>SV</b>	Symbolen på produkten eller emballaget anger att produkten inte får hanteras som hushållsavfall. Den skall i stället lämnas in på uppsamlingsplats för återvinning av el- och elektronikkomponenter. Genom att säkerställa att produkten hanteras på rätt sätt bidrar du till att förebygga eventuellt negativa miljö- och hälsoeffekter som kan uppstå om produkten kasserats som vanligt avfall. För ytterligare upplysningar om återvinning bör du kontakta lokala myndigheter eller sophämnings tjänst eller affären där du köpte varan
<b>NO</b>	Symbolen på produktet eller på emballasjen viser at dette produktet ikke må behandles som husholdningsavfall. Det skal derimot bringes til et mottak for resirkulering av elektrisk og elektronisk utstyr. Ved å sørge for korrekt avhending av apparatet, vil du bidra til å forebygge de negative konsekvenser for miljø og helse som gal håndtering kan medføre. For nærmere informasjon om resirkulering av dette produktet, vennligst kontakt kommunen, renovasjonsselskapet eller forretningen der du anskaffet det.



## **TABLE OF CONTENTS**

<b>Technical specifications</b>	<b>Page 1</b>
<b>Preparing oven</b>	<b>Page 2</b>
<b>Control panel</b>	<b>Page 3</b>
<b>Description of control panel symbols</b>	<b>Pages 4-5</b>
<b>Using the rotisserie</b>	<b>Page 6</b>
<b>Using the grill</b>	<b>Page 6</b>
<b>Electronic programmer</b>	<b>Pages 7-14</b>
<b>Timer</b>	<b>Page 14</b>
<b>End of cooking</b>	<b>Page 15</b>
<b>Removing and cleaning the oven door</b>	<b>Pages 15-16</b>
<b>Replacing the bulb</b>	<b>Page 16</b>
<b>Cleaning and maintenance</b>	<b>Page 17</b>
<b>Technical support</b>	<b>Page 17</b>
<b>Instruction for installation</b>	<b>Page 18</b>
<b>Baking chart</b>	<b>Page 19</b>



**Dear Customer,**

Thank you for choosing our products. We are sure that it will satisfy all your requirements and guarantee excellent results at all times.

It is important to carefully follow the instructions for correct use of the appliance.

The manufacturer will not be liable for damage to property or injury to persons caused by faulty or incorrect installation.

The manufacturer reserves the right to make alterations to the product at any time without notice.

**Technical Specifications**

This appliance complies with regulations 73/23 CEE and 93/68 CEE, EMC 89/336 CEE.

**Power supply voltage**

220-240V~ 50/60Hz

**Volume**                80litres

**Heating elements (kW)**

Upper heating element	1.05kW	Radial fan	0.025kW
Lower heating element	1.55kW	Spit gear motor	0.004kW
Circular heating element	2.50kW	Oven light	0.025kW
Grill heating element	2.50kW	Cooling fan	0.03kW

**Dimensions:**

Length:                696  
Depth:                 524  
Height:                595

**Max Rated Inputs**

2750 W

**Installation**

Qualified personnel must carry out installation only. All work must be performed with the appliance disconnected. The connection cable must have a minimum section of 1.5mm<sup>2</sup>. This appliance should be wired into a 15A double pole switched fused spur outlet having 3mm contact separation and placed in an easily accessible position adjacent to the appliance.

**Caution: the appliance must be earthed in accordance with legal regulations.**

**Maintenance : Before carrying out maintenance, disconnect the appliance from the electricity supply.**

**Preparing the oven for use**

Clean the insides of the oven using non-abrasive soap and warm water then rinses and dry. Switch the oven on at maximum temperature for approximately 20 minutes in order to eliminate oil, grease and remains of any other products used during manufacturing that can cause unpleasant smells during cooking.

**Caution;**

Keep children well away from the oven during operation.

The appliance hasn't been manufactured to be used by children.

Be careful , children don't play with the appliance.

 
 
 
**\*Note**

Never place Metal products on the oven base E.G Pans or aluminium foil.

Always clean oven with non-caustic oven cleaners.



## Control Panel

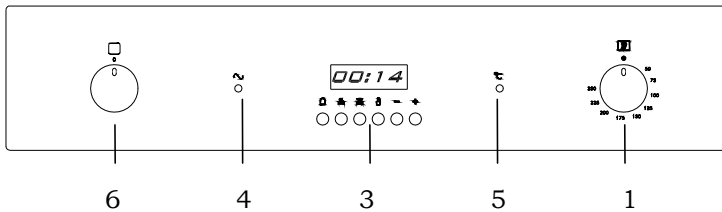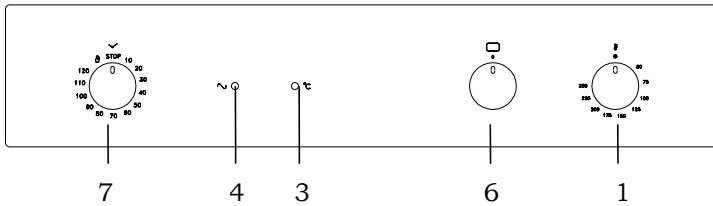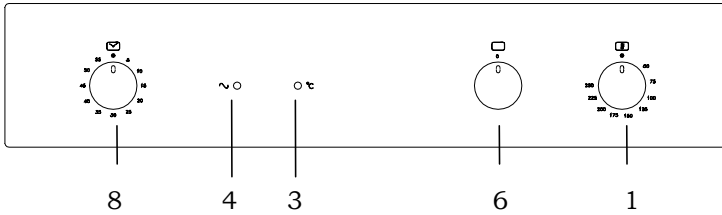

- 1. Thermostat
- 2. Switch
- 3. Electronic programmer
- 4. Power supply pilot light

- 5. Temperature pilot light
- 6. Selector
- 7. End of Cooking
- 8. Timer

## Description of control panel symbols



**Oven Light**



**Conventional Cooking**



**Slow Cooking**



**Upper element**



**Centre Grilling/Rotisserie** (rotisserie only where provided)



**Grilling/Rotisserie fan assisted** (rotisserie only where provided)



**Fan assisted Conventional Cooking**



**Fan Forced Cooking**



**Defrosting**



Fan assisted lower element

## **OVEN FUNCTION SELECTIONS**



**LIGHT:** The light illuminates the oven during cooking and cleaning process.



**CONVENTIONAL COOKING:** Uses both top and bottom elements with full thermostat control for conventional baking and roasting.



**SLOW COOKING:** Using the lower element for the cooking of pastries and casseroles.



**UPPER ELEMENT:** Using the large grill element for grilling meat, fish or poultry the oven door must be closed.



**CENTRE GRILL:** Using the small grill element for grilling or melting cheese the oven door must remain closed (Rotisserie function only where provided)



**FAN ASSISTED MAXI GRILL:** Using the large grill element and the fan for more even and crisper grilling of meat, fish or poultry (Rotisserie function only where provided).



**FAN ASSISTED CONVENTIONAL COOKING:** Using both the top and bottom elements, the fan gives more even and convenient traditional style cooking.



**FAN FORCED COOKING:** A fan is mounted on the back wall and surrounded by an element for fast and convenient cooking on all levels of the oven.



**DEFROST:** This function activates the fan only to allow controlled and hygienic defrosting.











**FAN ASSISTED LOWER ELEMENT:** recommended for warming or very slow cooking of food.







## FUNCTION BUTTONS

-  Decreases temperature
-  Increases temperature
-  ON/OFF and Controls Lock Function
-  Minute minder
-  Cooking time
-  End time
- Time setting
- + Time setting
-  Program setting
-  Program setting

## OPERATION

The timer flashes on the display when switched on for the first time or after a power cut, and the oven cannot be operated; follow the “Setting the time” procedure to start it.

### SETTING THE TIME

Press buttons  and  simultaneously and then release them. Use buttons — and + to set the exact time.

Note: this operation must be completed in 3 sec. time, while the 2 dots on the timer display keep flashing. Once you have completed the time setting, wait for the 2 dots stop flashing.


### SOUND SIGNAL


The oven performs sound signals to show different functions, as for example the end of cooking.

There are 3 different sound levels, which can be modified:

When the oven is switched off, press the — key, and with each pressure the oven performs the sound to a different level; the last one performed will be automatically set.

### SWITCHING ON THE OVEN



Press and release the  key, then you will hear a sound signal.

The timer display will show ON, the bulb symbol  lights on and the internal oven light turns on. Now you can proceed to set a cooking function.


### MINUTE MINDER




The minute minder is only a counter of time and it is totally independent from any cooking function.

It can be useful, for example, when set to remember to stop a cooking operation. It can be used also when the oven is switched off.

 

To set the minute minder, switch on the oven by pressing and releasing the  key, then press the  key:



The display reset to zero and the 2 dots start flashing. Now you have 3 seconds to set the desired time by using the keys — and + up to 23h59m.

Once the set time has elapsed, you will hear a sound signal and the  symbol flashes.


To stop the minute minder and the flashing symbol just press one of the following keys    — +

### MANUAL OPERATION FOR AN INDEFINITE PERIOD OF TIME

  Switch on the oven and select an available cooking function using the keys  and  :



The oven will suggest a preset temperature, which can be changed by using the keys  and  . The oven will start working up to the preset temperature and the centigrade degree symbol ° starts blinking, which means the preheating of the oven.

When the requested temperature is reached this symbol stops blinking and the oven beeps.


To switch off the oven, just press and release the  key.


## COOKING TIME SEMIAUTOMATIC OPERATION




It is recommended to set the duration of cooking


Switch on the oven by pressing and releasing the  key, then press and release the  key. On the timer display the symbol **A** appears. Set the desired time of cooking with the keys - and + up to 10h and 00m.


Then you will hear a sound signal and the timer will show the current hour: you can select an available cooking function with the keys ◀ and ▶

On the timer display the symbol  appears.

The oven suggests a preset temperature for each function, which can be changed with the keys ▼ and ▲. The oven starts working for the set time; when this time has elapsed the oven automatically stops cooking. You will hear a sound signal, while the temperature display and the cooking function display turn off, the timer display shows the current hour and the symbols  and **A** blink.



To stop the sound and exit to the program, just press one of the following keys    - +

The symbol  appears on the function display and then the oven light turns on.


Now the oven is ready to be programmed again; you can select a new cooking function or switch the oven off by pressing and releasing the  key.

## END OF COOKING SEMIAUTOMATIC OPERATION

It is recommended to set the end of cooking time


Switch on the oven by pressing and releasing the  key, then press and release the  key. On the timer display the symbol **A** appears. Set the desired end of cooking time with the keys - and + up to 23h and 59m.

Then you will hear a sound signal and the timer will show the current hour: you can select an available cooking function with the keys ◀ and ▶

On the timer display the symbol  appears.


The oven suggests a preset temperature for each function, which can be changed by using the keys ▼ and ▲.


The oven starts cooking and when fixed time has elapsed, it will automatically turn off.

At the end of the fixed cooking time, the oven beeps, the temperature display and the cooking function display turn off, the timer display shows the current hour and the 2 symbols  and **A** blink.

To stop the oven beep or to cancel the program just push one of the following keys:



   - +


The symbol  appears on the function display and then the oven light turns on.

Now the oven is ready to be programmed again; you can select a new cooking function or switch the oven off by pressing and releasing the  key.

## AUTOMATIC OPERATION

It is recommended to set the duration and the end of cooking

Switch on the oven by pressing and releasing the  key, then press and release the  key and set the duration of cooking with the **-** and **+** keys.

Then you will hear a sound signal and the timer will show the current hour. Press the  key and set the end of cooking with the **-** and **+** key.

Another sound signal will be heard and the 2 dots stop blinking: this means the time has been set.

On the display you will see the set time, the temperature and function.

The oven light turns off.


Now select an available cooking function with the **◀** and **▶** keys.

The oven suggests a preset temperature for each function, which can be changed by using the keys **▼** and **▲**.

Once the 2 dots have stopped blinking, the oven begins the delayed start mode: it will automatically start for the requested duration and stop at the requested time.


When the oven is cooking, you see the selected temperature, the current hour and the selected function on the corresponding displays. The internal oven light turns off.


However, both the temperature and the function can be changed by repeating the above mentioned instructions.

At the end of the program, the oven beeps, the temperature display and the cooking function display turn off, the timer display shows the current hour and the 2 symbols  and **A** blink.

To stop the sound signal or to cancel the program just push one of the following keys:



The symbol  appears on the function display and then the oven light turns on.

Now the oven is ready to be programmed again; you can select a new cooking function or switch the oven off by pressing and releasing the  key.

## AUTOMATIC AND SEMIAUTOMATIC COOKING RESTRICTIONS

The preheating (PRH) and defrosting functions are not compatible with the above mentioned automatic and semiautomatic operation.

-After setting the preheating or the defrosting function, it is not possible to set either the duration or the end of cooking.

-When programming the oven with the automatic operation, you cannot choose the preheating or the defrosting function.



## DISPLAY SYMBOLS



**Pot:** when it lights up, it shows that a cooking function is on.

The pot does not light up when the oven light, preheating or defrosting function is activated.

When the pot is flashing, it shows the end of a cooking time. During the delayed start phase, the symbol is off and lights up when the oven starts cooking.

**A (automatic):** when it lights up, it shows that a cooking time has been set; when flashing, it means the end of a cooking program.



**Bell:** when it lights up, it means that the minute minder is on.

When flashing, it means the end of the minute count.

## SELECTING THE COOKING TEMPERATURE

With the oven switched on, the cooking temperature can be selected by using the **▼** and **▲**

keys : the temperatures increases between the low and high setting with 5 degrees increases, which are shown on the temperature display.

Note: each cooking function has a preset temperature, which can be changed as described above.

## SELECTING THE COOKING FUNCTION

With the oven switched on, the cooking functions can be selected by using the **◀** and **▶** keys:

the cooking function icons sequentially light up.

## COOKING FUNCTIONS

 


### OVEN LIGHT

The internal oven light turns on by pressing and releasing the **OFF** key. To turn it off press and release again the same key.

When selecting a cooking function, the oven light turns on, and once the selected temperature is achieved, the light remains on for another 3 minutes.

During a cooking operation or defrosting it is possible to turn on the oven light by pressing one of the following keys



The light remains on for 1 minute.

The light can also be turned on when the Controls Lock function is active by pressing

one of the following keys

### PRH PREHEATING

This function allows to preheat faster the oven, before choosing a cooking function.

When this function is operating, a moving symbol appears on the temperature display.

The preheating ends when its preset temperature is achieved by the oven; this temperature cannot be changed. At this point, the oven beeps, the light symbol and the oven light turn on. Now you can choose an available cooking function with the **◀** and **▶** keys.



### TRADITIONAL COOKING



This provides traditional cooking with heat from the top and bottom elements.



### LOWER ELEMENT MODE

This is for slow cooking or for warming up meals.



### TOP ELEMENT MODE

This is for gentle cooking, browning or keeping cooked dishes warm.



### GRILL HEATING ELEMENT

It is suggested for grilling food.



### GRILL HEATING ELEMENT WITH FAN

This function is suggested for a gently grilling of food.



#### PIZZA FUNCTION

This kind of cooking is ideal for pizza and vegetable dishes.



#### FAN OVEN MODE

This provides even heating with the fan and allows different dishes to be cooked at the same time on different levels.



#### DEFROST MODE

This function allows to reduce the defrost time for frozen food.

The fan runs without any heating of the oven.

On the temperature display appears the message **dEF**, which means this function is active.

### OTHER FUNCTIONS

#### OVEN OFF MODE

When the oven is switched off, the temperature and program displays are off and the timer shows the current hour.

#### “CHILDREN CARE” - CONTROLS LOCK FUNCTION

This function can be activated in any moment to prevent children to play with the oven.

In particular, if this function is activated with the oven turned off, it will not be possible to switch the oven on: to operate with the oven it is necessary to remove the lock.

To activate the locking function, hold down the key until the display shows the symbol (about 5 sec.) followed by **ON**, then the display shows again the current hour.

Note: once you have done this operation, it cannot be set any program or cooking function, except for the setting of the minute minder.

If the lock is activated after any program or cooking function, it will only be possible to set the minute minder or switch off the oven by pressing and releasing the .

By pressing any other key, the display will remember you that the locking function is activated.

The automatic or manual switching off of the oven will not disable the locking function.

To disable the locking function hold down the key until the display (about 5 sec.) followed by **OFF**, then the display shows again the current hour.

When the locking function is activated it is not possible to switch it on with the key, but only to switch it off.

#### ON / OFF BUTTON

When the oven is switched on, the key lets you to switch off the oven whatever function is selected and in any moment. To switch off the oven, just press and release the key.

When switching off the oven, any cooking function or program is cancelled. To set a new cooking program, follow the corresponding instructions from the beginning.

When the oven is switched on and the locking function is activated, you can switch off the oven just pressing and releasing the key, but the locking function keeps active.

To disable the lock hold on the key for about 5 seconds until the display followed by **OFF**, then the display will show the current hour.

#### “ ° ” SYMBOL

This symbol appears on the temperature display and represents the centigrade degrees.

If the symbol is blinking it means the oven is heating up to reach the temperature that has been set.

If the symbol is permanently on it means that the set temperature has been reached.

 
#### TIMER RESET

With the oven switched on, it is possible to reset the settings of the timer by pushing together the and keys.

Attention: the oven keeps switched on with the set function, and in manual operation.

It is possible to set again a cooking program, or also switch off the oven by pressing and releasing the key.

## Electronic Programmer

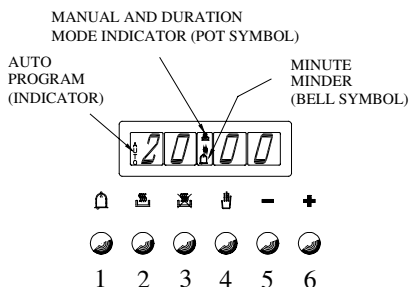

## Function Buttons

- A Time display (24 hour clock)
- B Minute minder
- C Cooking time
- D End of cooking time
- E Manual operation
- F Increase program time
- G Decrease program time
- H Automatic cooking programmed
- I Automatic cooking in operation
- J Minute minder in operation

### Setting the time of day

After pressing a function button, the required time can be set via the +/- keys. For quicker regulation, keep the required key pressed. By pressing the function key and then releasing it, the pre-selected function appears on the display and remains for 5 seconds during the time the setting can be performed (with one hand). Five seconds after releasing the function key or finishing the setting, the display returns to the clock. Any program set will start immediately. Program selection is accompanied by the surrounding of a buzzer.

### Manual oven operation

In order that the oven can be used manually, the timer must be set to "manual". If the automatic cooking indicator (symbol for H) is flashing, press the (symbol for E) button until the time display reads zero then press the (symbol for H) indicator will disappear. The oven can now be used manually.

### Setting the minute minder

The minute minder can be used to time any period from 1 minute to 23 hours 59 minutes. To set the minute minder press and hold (symbol for B) button and at the same time press the + or - buttons to set the required time. Release the buttons once the time has been set to start the minute minder running. The time display will show the time of day and the (symbol for J) indicator, will appear.

To check the remaining time on the minute minder at any point, press the (symbol for E) button. The time display will show the remaining time on the minute minder until the button is released.

Once the time has elapsed the (symbol for J) indicator disappears and a buzzer sounds. This can be switched off by pressing the (symbol for B) button.

### Setting the timer to run the oven off automatically

Either:

Press the hold the (symbol for C) button and at the same time press the + or the - buttons to set the required cooking time.

Or:

Press and hold the (symbol for D) button and at the same time press the + or - buttons to set the required time which cooking should end.

Release the buttons once the time has been set. The time display will show the time of day and the (symbol for H) and (symbol for I) indicators will flash.

Set the oven function and temperature selectors to the required positions. The oven will turn on immediately and operate for the period selected on the timer, then switch off automatically. If clock=end of the cooking time, the relay and saucepan symbol will be off. The buzzer will sound and symbol A will blink.

Once the cooking time has elapsed the (symbol for I) indicator disappears and a buzzer sounds. This can be switched off by pressing the (symbol for B) button. Turn the oven function and temperature selector knobs to zero. Press the (symbol for E) button to reset the oven to manual operation. The flashing (symbol for H) indicator will disappear. The oven can now be used manually.

### Cancelling an automatic cooking program

An automatic program can be cancelled at any moment by pressing and holding the (symbol for C) or (symbol for D) button until the time display reads zero. Press the (symbol for E) button to reset the oven to manual operation. The flashing (symbol for H) indicator will disappear. The oven can now be used manually.

### Programming your oven with mechanical 60 minutes timer.

The timer is equipped with a buzzer and may be regulated for a maximum period of 60 minutes.

The regulation knob (Fig.2) must be turned in a clockwise direction until it reaches the 60-minute position and then turned to the desired time by turning the knob in a anticlockwise direction. The oven will not be turned off automatically. The minute timer ringing will advise you that the cooking time is over.

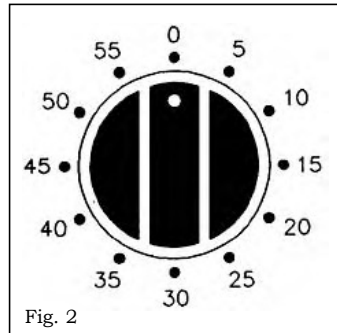 


Fig. 2


### Programming your oven with electrical 120 minutes cut-off timer (Fig. 3)

The function of the programming timer is to make the oven turn on for a pre-determined amount of time.

- To operate.

After having set the oven switch knob to the desired temperature, turn the timer knob in a clockwise direction to the desired cooking time (maximum 120 minutes). After the set time runs out, the timer will have returned to position "0" and the oven will automatically turn off.

- Manual position.

If the cooking time is longer than the 2 hours programme, or if you wish to use the oven manually, to turn it off when you desire, turn the knob to  position.

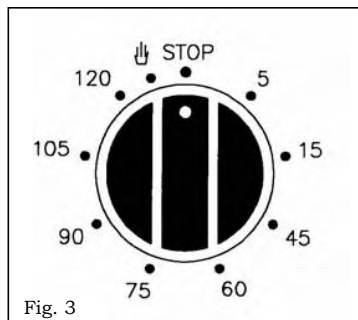 


Fig. 3

### Oven door

Clean the oven door using non-abrasive products. The glass panel can be easily removed and cleaned by unscrewing the two screws at the side shown in figure 4.

#### **NOTE:**

A kit is available consisting a door with three glass panels to be fitted if there are small children nearby.

For further information please contact your dealer, specifying the oven model and serial number given on the grey data plate affixed inside the oven.

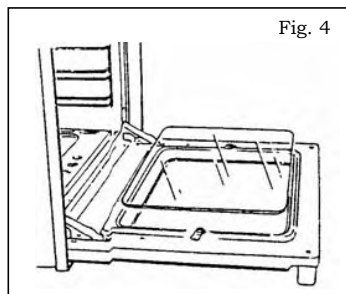 



Fig. 4

### Removing the oven door

 To aid cleaning and make access to the oven interior easier, the oven door can be simply removed (see diagram).

Open the oven door fully. Lift the metal loop (A) on each hinge (B) and engage in the notch on the hinge (C). This will lock the hinges in the position.

Stand in front of the oven and grasp the open door with one hand on each side. Lift the door as if closing it until it is an angle of about 30°, then continue lifting the door towards you, out of the hinge slots. The door can now be placed on a convenient surface for cleaning.

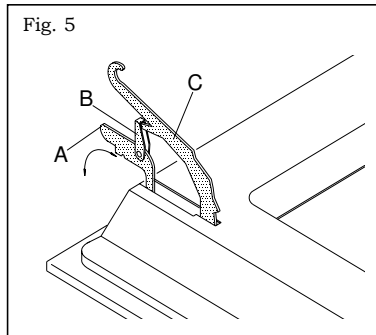

### Replacing the oven light (Fig 6)

(NOT COVERED BY THE APPLIANCE WARRANTY)

 
Disconnect the appliance from the electricity supply, remove the oven door (as described previously) as well as the oven shelves. Remove the protective glass light-cover by twisting anticlockwise.

Unscrew the old bulb and discard safely, replace with the type specified in the Technical Data and refit the cover.

**NOTE:** - The glass cover may be tight and may therefore require a tight grip to release.

**Note:** Use only 25 W, E-14 type, T 300°C bulbs.

The lamp used in this appliance is a 'special purpose lamp' intended only for the usage with this appliance; is not intended for household room illumination.

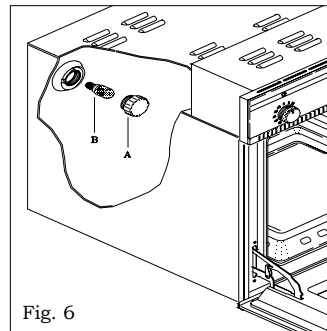

## **Cleaning and Maintenance**

### **Important:**

Before carrying out maintenance on the oven, it must always be switched off.

The stainless steel and enamelled parts will keep their finish if cleaned with water or using specific products, drying them thoroughly.

Avoid using products that contain chlorine or diluted chlorine solutions, caustic soda, abrasive detergents, hydrochloric acid, vinegar and other products that can scratch. Stains left on the bottom of the oven (sauces, sugary substances, egg white and fats) are caused by splatters or spillage of food. Spattering occurs during roasting and is due to the temperature being too high whereas spilling is due to containers being too small or the food increasing in volume during cooking. These two problems can be solved by using high-sided containers or by using the dripping pan supplied with the oven. When cleaning the lower part of the oven, you are advised to remove any stains while the oven is still warm- the longer you wait, the more difficult it will be to remove them. Immediately after use while the oven is still warm but switched off, you are also advised to place a cloth soaked in ammonia- a few drops are sufficient- on the bottom of the oven. Close the oven door, wait approximately 10 minutes and then dry thoroughly.

### **Use only Non Caustics Oven cleaners**

#### **Technical support**

If the oven does not work correctly, you are advised to check the following before calling the technical support service:

*\*CHECK THAT THE CIRCUIT BREAKS OR FUSE IS INTACT.*

*\*CHECK THE PROGRAMMING OF THE ELECTRONIC PROGRAMMER.*

If the cause of the fault is not identified, switch the appliance off, do not tamper with it and call Technical Support Service, specifying the model indicated on the identification plate at the bottom of the front of the oven.

## Cut out Dimensions for B700 Electric oven

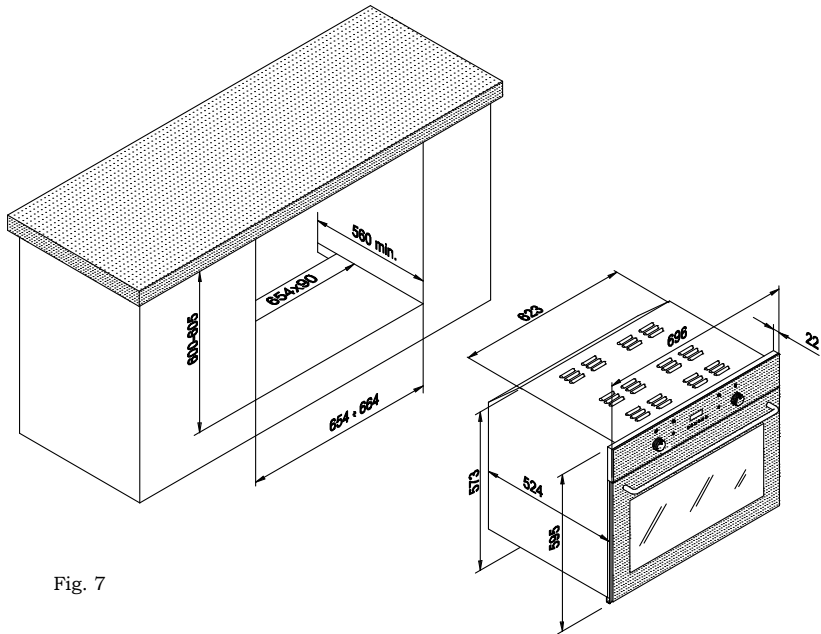 


Fig. 7

**Electrical:** All electrical connections must be performed by a licensed contractor. All care must be taken to ensure the installation is properly earthed and conforms to local codes.

### **Cabinet:**

This appliance is designed for building-in to a standard 700mm wide oven housing. The housing, adjacent furniture and all materials used in installation must be able to withstand a minimum temperature of 80°C plus ambient temperature during periods of operation. In addition, adjacent furniture cabinet doors must be at minimum 3mm from the appliance at all points. Certain types of vinyl or laminate kitchen furniture cabinetry are particularly prone to heat damage and discoloration, any delamination or discoloration of materials which occurs below 80°C plus ambient temperature or where materials are less than 3mm from the appliance will be the liability of the owner.

**Technical Support:** Should you require any further information please contact your dealer.

**Please Note:** Incorrect Installation will void all warranty.



<b>NORMAL BAKE</b>				
		<b>SHELF</b>	<b>Temp. °C</b>	<b>TIME</b>
<b>BAKED PRODUCTS</b>		2-3	170-190	10-20 mins
Bread	Loaves	3	210-220	30-45 mins
	Rolls	3	200-210	15-20 mins
Cakes	Butter	3	180	45-60 mins
	Patty	3	180	5 -20 mins
	Rich fruit	3-4	150-160	1.5-2 hrs
	Sponge	3	180-190	15-25 mins
Meringues		3	100-110	1.25-1.5 mins
	Muffins	3	200-220	15-20 mins
	Pastry Short	2-3	200	10-15 mins
	Flacky	2-3	230	10-20 mins
	Puff	3	230-250	10-20 mins
	Choux	3	190-230	40-60 mins
<b>CASSEROLES</b>				
Beef, Veal		3-4	160	2.25-3 hrs
Lamb, Mutton, Pork		3-4	160	2-2.5 hrs
Poultry		3-4	170	1-1.5 hrs
<b>VEGETABLES</b>				
Baked potatoes		2-3-4	200	45-60 mins
Oven baked rice		2-3	180	40 mins
Roast		2-3-4	160-180	1-1.5 hrs
<b>FISH</b>				
Whole		2-3	180	25-50 mins
Fillets		2-3	180	15-30 mins
<b>POULTRY</b>				
<b>CHICKEN</b>				
	Pieces	2-3	180	30-45 mins
	Whole	3	160-170	25-30 mins
TURKEY		3-4	150	15-20 mins
<b>SOUFFLES</b>				
	Large	3	180	45-55 mins
	Individual	3	180	35-50 mins

